

## Exchanging the ALU chain tensioner for STEEL tensioner




- wrench 10 mm
- pliers

You can reach your tensioner through the foot holes.


1. Remove the chain from the tensioner.



2. Cut the Ty-rap and the spring comes loose.

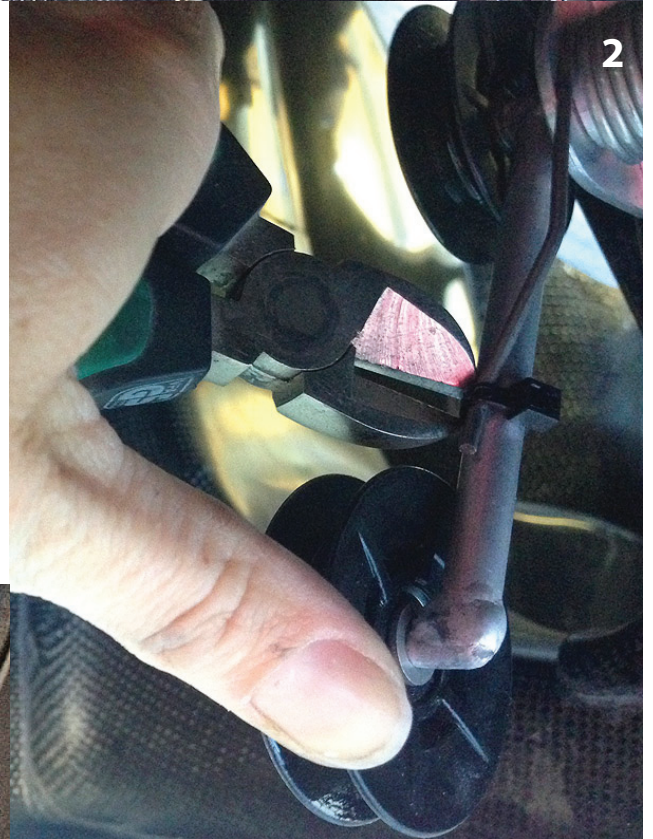

3. Remove this nut. And remove the tensioner from your velomobile.

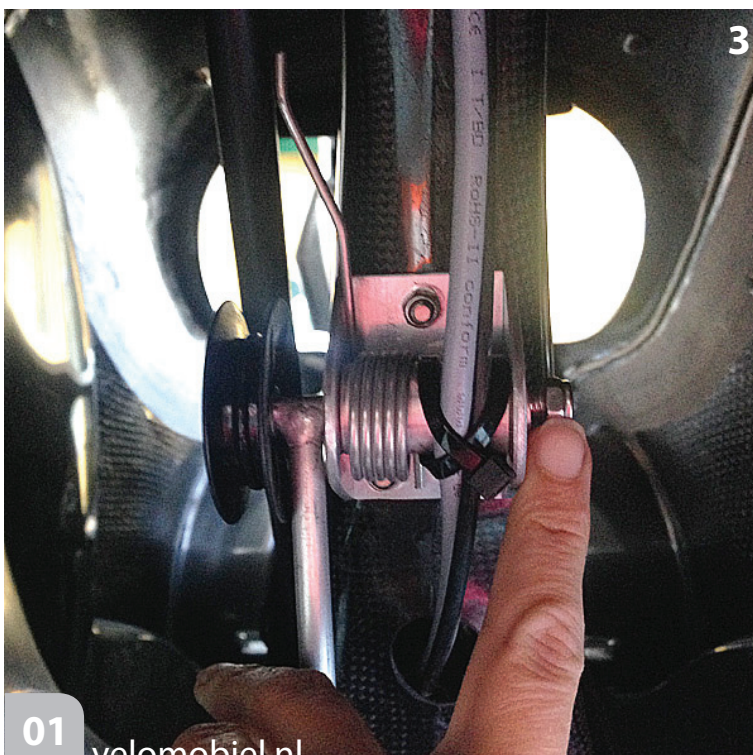




## Exchanging the ALU chain tensioner for STEEL tensioner

### 4. Remove the idlers.

Before mounting the idlers put a washer on the tensioner first, than the idler and the nut.

Use washers on either side of the bracket when mounting it in your velomobile – see my fingers!

### 5. Tighten the nuts well.

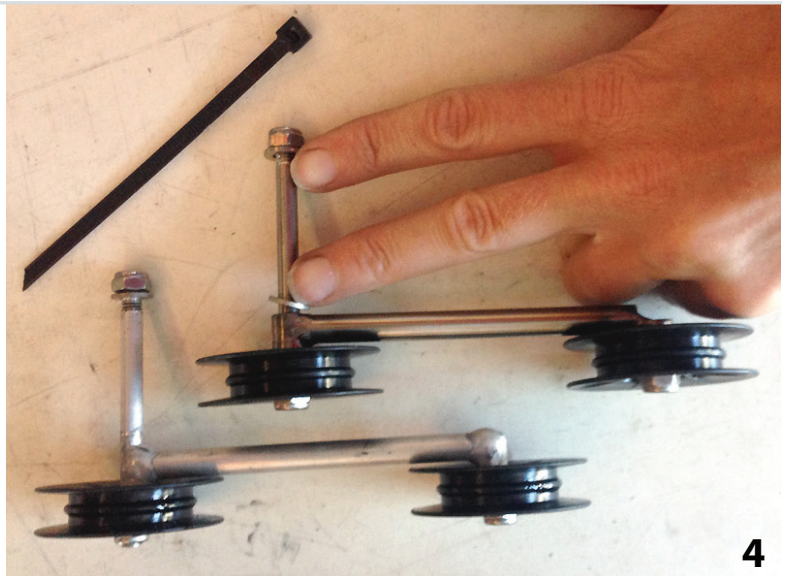

### 6. Mount it back in your velomobile, it should move easy but without play.

Ty-rap the spring to the arm of the tensioner.

### 7. Put the chain back in place.

