




## QV - Mounting the child seat



- spanner 10
- spanner 8
- imbus 3
- drilling machine with 5 mm drill
- contact glue (Bison kit Universal)
- 2 clamps

Drill the hole and attach the aluminum seat mount exactly in position "A" - shown in picture 1. Do this for both sides of the seat.

Mount the seat in your velomobile in the location indicated in photo 2 - just behind your seat on the rear wheel arch, where the rear axle has its pivot point. Use the second lowest hole (photo 1 - "B"). Tighten the nuts properly.

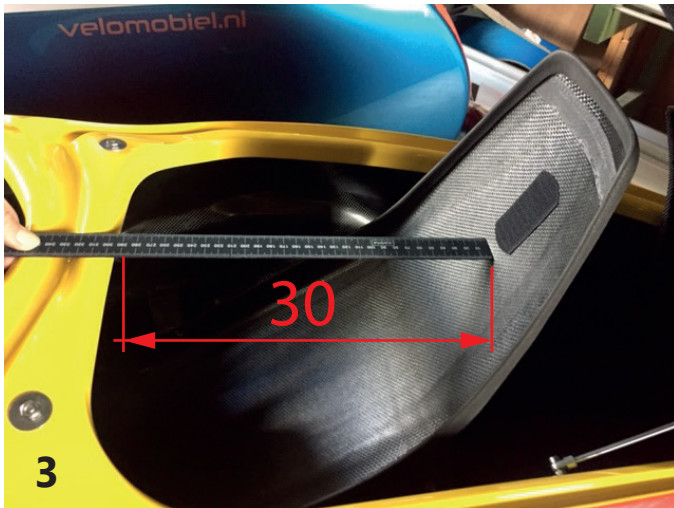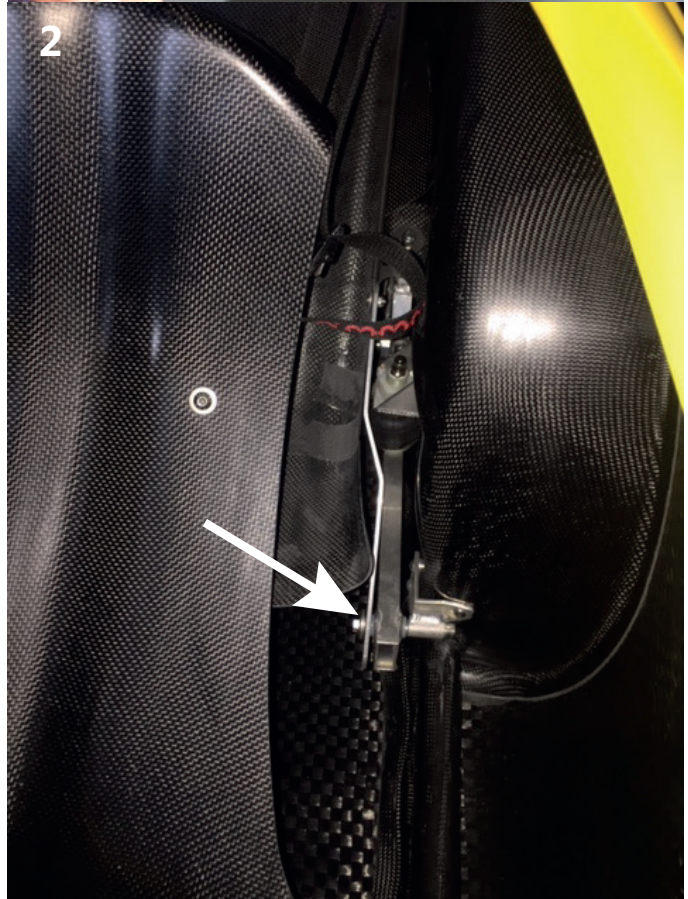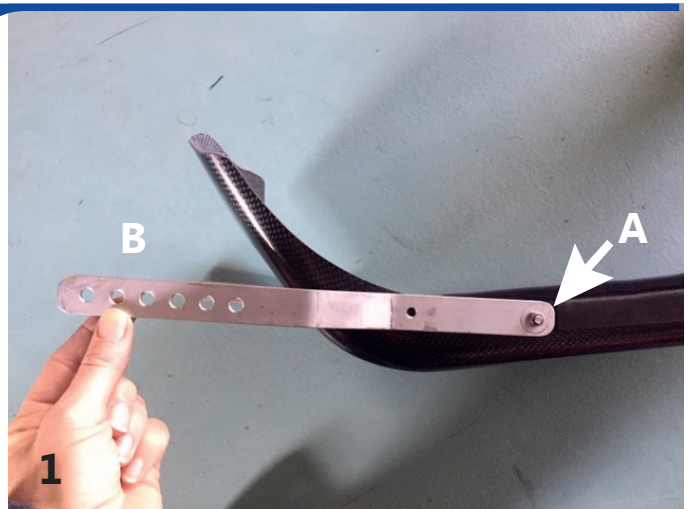

Tilt the seat backwards until you can measure 30 cm (12 inches) from the beam - see photo 3.



Use the clamps to secure the seat mounts in place (photos 4 and 5).



## QV - Mounting the child seat

Check that the child seat does not touch the father / mother seat, even when loaded (photo 6). Remove some of the cabon laminate from the child seat - if it makes contact.



Remove the child seat from your velomobile and drill the second hole to properly secure the seat mount (Photo 7). Fasten it with a bolt and a nut. Remove the clamps and install the seat in your velomobile.



Glue the pads under windows inside the hood using a contact glue (pic 8).



Stick hook velcro on the beam in front of the face of your child as shown in pic 9. And attach the pad.