


Snoek - mirror installation



- snoek mirror with cap
- paint protection foil
- tape: clear hockey tape or electrical tape in colour of your snoek;
- paper tape
- spoke
- scissors
- tape measure
- safety knife

a
b
c
d
e

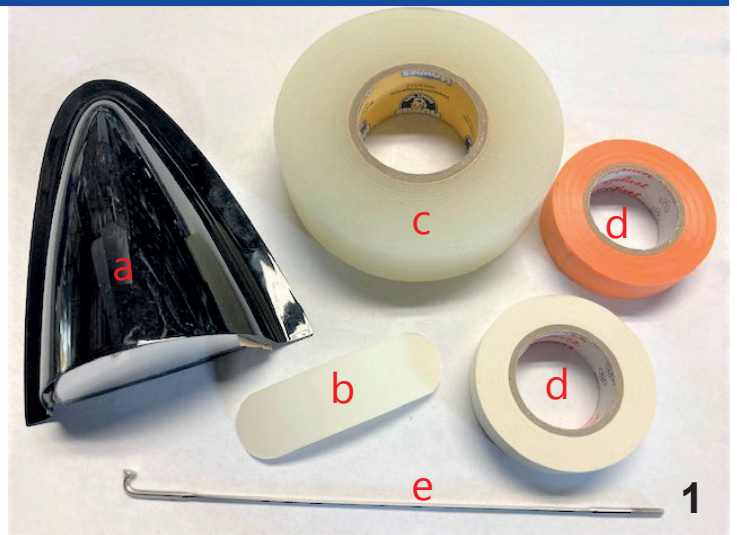

1

Pic 2)

There are two types of Snoek mirrors. Light and Super Light. Both are adjustable.

A) Super light version weighs less than 20g. It takes a little more time to install and it is cheaper.

B) Light version weighs less than 30g and can be adjusted at any time. It is more expensive.

You can see the difference in the video:

<https://youtu.be/I0luanJvUOk>



2

Pic 3 and 4)

Measure 60 cm from the floor. The lower edge of the mirror cover is placed at this height.

Use a paper tape to make some notes on your snoek's body.


Drawing directly on the body could be permanent.



01

velomobiel.nl

3

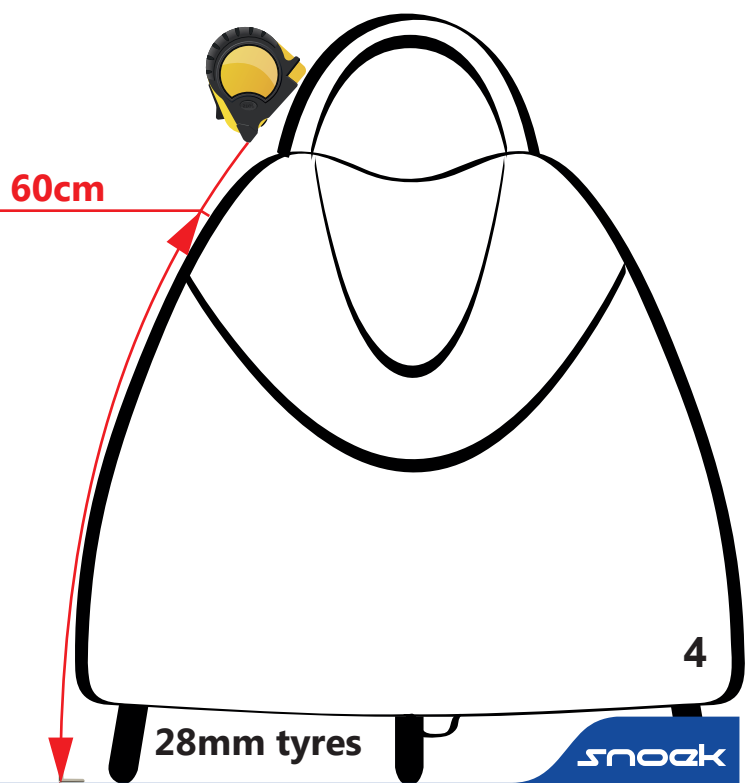

4


28mm tyres

snoek

Snoek - mirror installation

Pic 5)

Measure 3,5 cm from the "manhole" edge. It should be about in the center of the mirror.

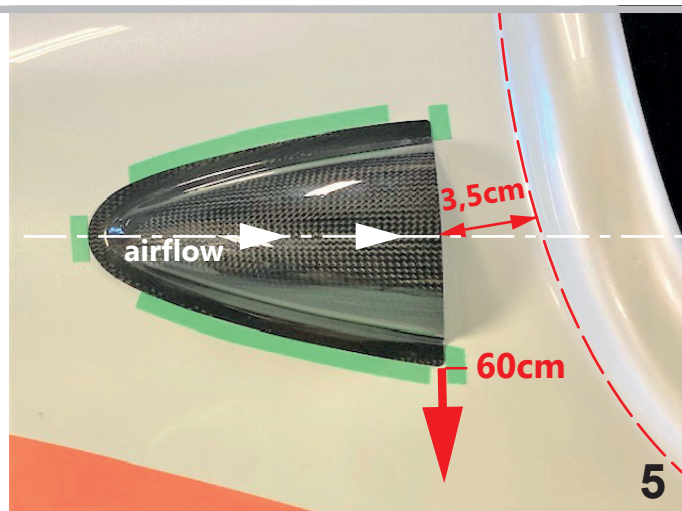

Pic 6)


Remove **1** of the white papers - double-sided tape.

Super light version (pic 2 - model A)

Remove the beige papers next to the mirror.

Stick the mirror on the body of the Snoek in the direction of the airflow (pic 5).

Mark the outlines of the mirror cover - we use narrow flexible tape - the green line around the cover (pic 5).

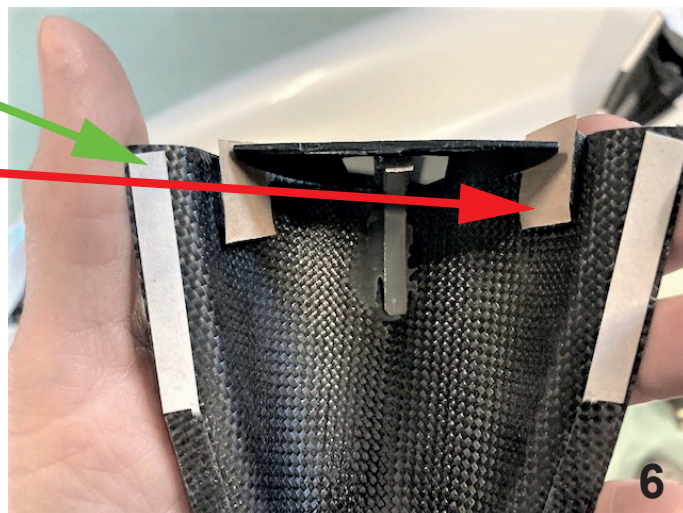

Pic 7)

Sit inside your velomobile, hold relaxed your head in your cycling position and don't wear too much clothes (just a shirt and thin trousers). Adjust the mirror using a spoke in a position you like.



Pic 8)

You can see a little bit of the aero roll structure behind your head.

Notice: if you have a racehood, check this adjustment with the hood on your vm.

Super light version (pic 2 - model A) you must press by thumb and index finger just like the picture shows - the mirror will be fixed in its position.

The black tape allows you to unstick and stick again for many times.



Snoek - mirror installation


Pic 9)

Now detach the mirror cap from the body of your vm. And, if you have it, apply the paint protection film. It's just foil from the automotive industry, nothing special. Apply it to a clean, water-sprayed surface (and with very clean hands) in the area just below your mirror.



Pic 10)

Remove any remaining paper from the double-sided tape from the inside of your mirror cover (Pic 6 - white paper). And stick the mirror cover on your vm along your marking (in my case - along with the green tape). Remove the marking and place electrical tape or clear hockey tape (as in pic10) around and over the edge of the mirror cover. Electrical tape is more flexible and therefore easier to apply. Set it in place by warming up (a little bit!) by blow dryer.

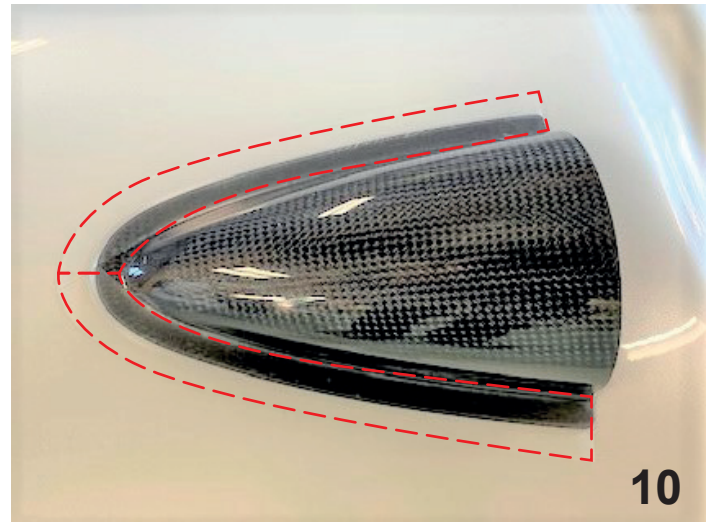

Enjoy your mirror!