

Snoek - the swingarm cover



- snoek swingarm cover
- self-adhesive velcro (if not included)
- masking tape
- heat-gun/hair dryer

Pic 1&2)

Apply 5 pieces of adhesive Velcro - the hook part on the swingarm cover. The **front** touches the floor of your Snoek.

Temporarily tape the looped part to the hook's Velcro - just like you see in pictures 1 and 2.



Pic 3)

Stick some masking tape on the shiny side of the cover along the Velcro. (Tape is light in color and easily visible in the dark velomobile. More visible than lines by a marker.)



Pic 4)

Place the cover in your velomobile - just behind the seat - to cover the rear swingarm. This prevents things from falling into the drivetrain.

Lightly press the front lower part down and back to find the correct position.



Pic 5)


Move the masking tape from the cover to the walls of your velomobile, as you can see in photo 5.



Pic 6 & 7)

Remove the cover from your Snoek, remove the 5 velcro-loop parts and stick it along the masking tape in your velomobile.

For good adhesion - heat the Velcro slightly with a heat gun or hairdryer (the glue will become shiny).

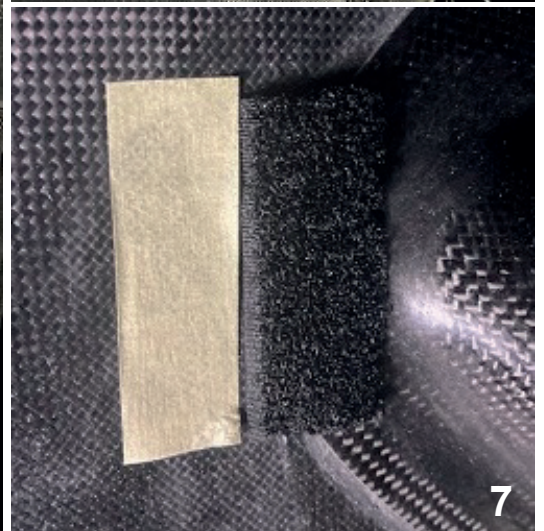

Pic 8)

Remove the masking tape and put the swingarm cover in place.

The cover can be loaded with stuff - clothes, shoes... But heavy material (tools, drinks...) is better placed on the floor of your Snoek.

