## Wheel cover assemble



- wheel cover
- glassfibre rod
- brass tube
- spoke clips
- scissors


Start by mounting the clips on the spokes. (pic 2 and 3) One every fourth spoke. Use the spokes on the side where the wheel cover will come.







Now join the rod-ends together in the brass tube (pic 4). See if the hoop fits nicely in the clips. If necessary, shorten the rod bit. Measure this exact. A too short rod will vibrate in the clips and then the fabric will wear quickly.

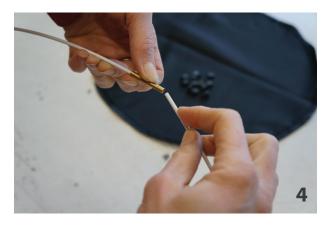

velomobiel.nl\_\_\_\_\_extras

Pull the string out at the opening and leave one knot in (pic 5).

Tighten that knot, so the fabric has a good tension. The hoop should remain flat (pic 6).

Pull the hoop against your waist and hold the strings with one hand, so the free hand can make a second without loosing tension. Then make a third knot. (pic 7)

After laying the knots the tension should not decrease.

If this succeeded you can cut the string 5 cm after the knots.

Lay the wheel cover in the clips (pic 8).

For the last clip you have to push in the hoop. Done!

